


REGATTA PRO-START INSTRUCTION SHEET

BEEPER RESPONSE

1 minute Dinghy sequence	—
2 minute Dinghy sequence	— —
3 minute Apx Q Dinghy sequence	— — —
5 minute Rule 26 sequence	— — — — —
Match Race Apx C sequence	— — — — —
2 minute rolling sequence	— — — —
3 minute rolling sequence	— — — — —
5 minute (pre 2001) rolling sequence	— — — — — —
No shape alert	••
10 second shape alert	—
20 second shape alert	— —
30 second shape alert	— — —
40 second shape alert	— — — —
50 second shape alert	— — — — —
60 second shape alert	— — — — — —

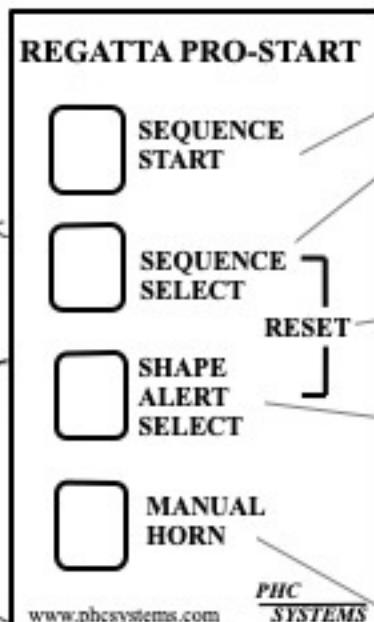

Depress and release to start the selected sequence.

Depress and release to determine the sequence you are in.

Depress and hold to cycle through the sequences. Release when you are at the desired sequence.

Depress 'Sequence Select' and 'Shape Alert Select' together to reset any sequence in progress.

Depress and release to determine the seconds for shape alert.

Depress and hold to cycle through the shape alert values. Release when you are at the desired value.

Depress at any time to sound the horn. Sequences in progress are **not** affected.

QUICKSTART PROCEDURE

- Plug RPS into 12 volt power source (ships battery, extra battery, etc)
- Verify that the beeper and horn chirp
- Set Sequence Select for desired starting sequence.
- Set Shape Alert Select for desired 'Alert' time.
- Depress Sequence Start

IMPORTANT

- The horn needs a good electrical connection. While it doesn't use a lot of power, it does draw **13 amperes** for short periods. If the cigarette lighter plug on board is connected to the battery via a small gauge or long length of wire then consider connecting directly to the battery.

Shape Alert Button

This button has different meanings for each sequence as follows:

1, 2, & 3 min Dinghy	Attention signal tens of seconds prior to first gun
5 Minute	Attention signal tens of seconds prior to first gun
Match Race	Attention signal minutes prior to first gun
2, 3, & 5 min Rolling	Shape alert tens of seconds prior to start gun